



CF129

KTM 790 Adventure /R_2019-

Kit for Left Side			
ID	Description	Cat. No	Pcs
1	Frame	CF129-L	1
2	Steel adapter	X132	1
3	Dural. sleeve, lenght=78mm	1325	1
4	Dural. sleeve, lenght=24mm	1329	1
5	Dural. sleeve, lenght =27mm	1330	1
6	Screw M8x50mm	1065	2
7	Screw M8x100mm	1000	1
8	Screw M10x25mm	1066	1
9	Washer - Flat M8	802	3
10	Washer - Flat M10	804	1


Kit for Right Side			
ID	Description	Cat.No	Pcs
1	Frame	CF129-P	1
2	Steel adapter	X133	1
3	Dural. sleeve, lenght =60mm	1326	1
4	Dural. sleeve, lenght =24mm	1329	1
5	Dural. sleeve, lenght =27mm	1330	1
6	Screw M8x50mm	1065	2
7	Screw M8x80mm	843	1
8	Screw M8x25mm	831	2
9	Washer - Flat M8	802	5
10	Screw M8x25mm	833	1

We recommend medium strenght thread glue.

Instructions:

- 1.) Take off the original bottom plastic casing**
- 2.) Mount the steel adapters following instructions below**
- 3.) Put back on the original plastic casing**
- 4.) Mount the crash frames following instructions below**

Left bottom part:

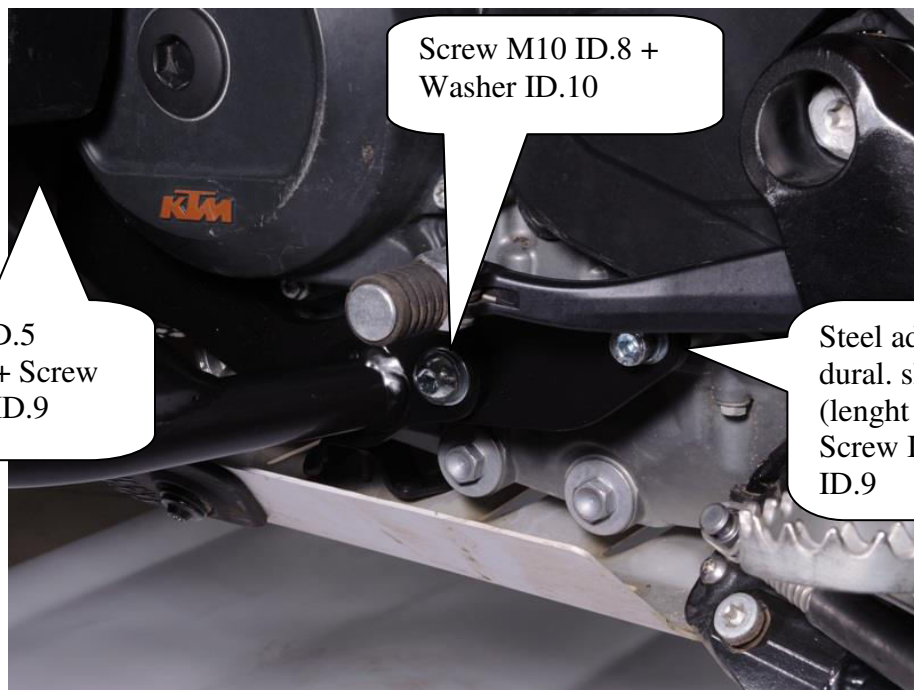


Screw M10 ID.8 +
Washer ID.10

Dural. sleeve ID.5
(lenght 27mm) + Screw
ID.6 + Washer ID.9

Steel adapter ID.2 +
dural. sleeve ID.4
(lenght 24mm) +
Screw ID.6 + Washer
ID.9

Right bottom part:

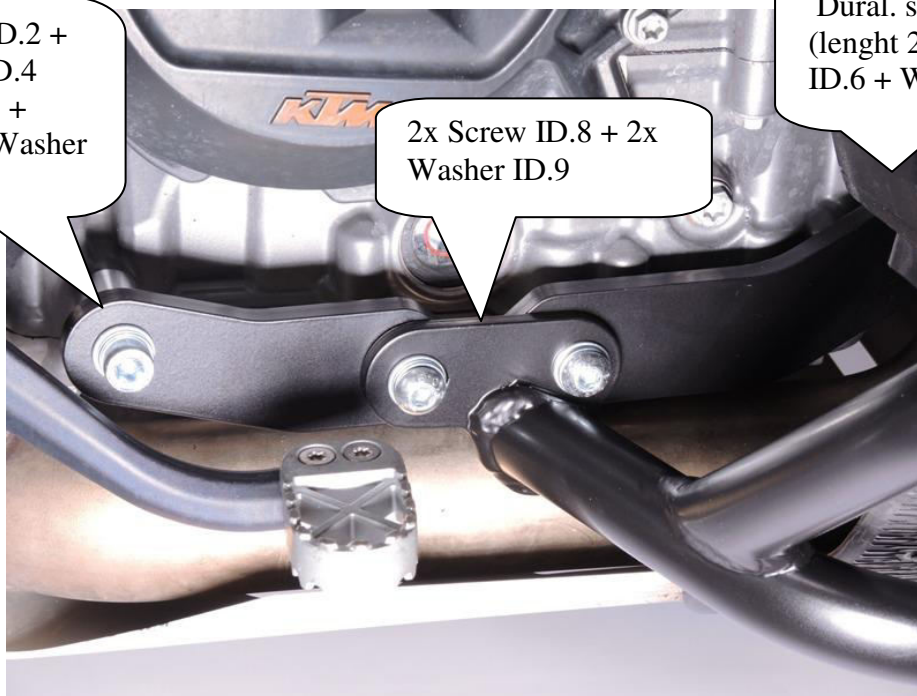

Steel adapter ID.2 +
dural. sleeve ID.4
(lenght 24mm) +
Screw ID.6 + Washer
ID.9

2x Screw ID.8 + 2x
Washer ID.9

Dural. sleeve ID.5
(lenght 27mm) + Screw
ID.6 + Washer ID.9



Screw ID.7 + dural. sleeve ID.3
(length 78mm) + Washer ID.9



Screw ID.7 + dural. sleeve ID.3
(length 60mm) + Washer ID.9