


CF12

Suzuki DR650RS

ID.	Description	Cat.N	Qt.
1	Bolt M8x25 rear gripping	833	2
2	Washer M8 big surface	988	2
3	Steel lower bracket- smaller	X37	1
4	U clamp with thread M10	X38	1
5	Washers M10	804	6
6	Nut M10	810	2
7	Steel bracket upper	X50	1
8	Crash frames L+R	CF12	1+1
9	Bolt M10x30 lower head for gripping frame+bracket	888	4
10	Plastic cover	X35	2
11	3M Tape	3M	2
12	Stickers RDMOTO		2


Fitting instruction:

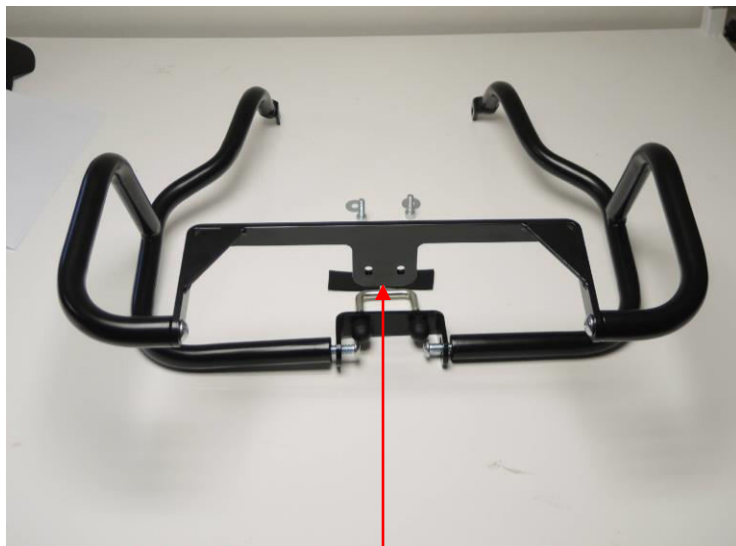

Place original bolts.



- Dismantle original bolt M8. For mounting use bolt ID.1 with washer ID.2 for both sides.

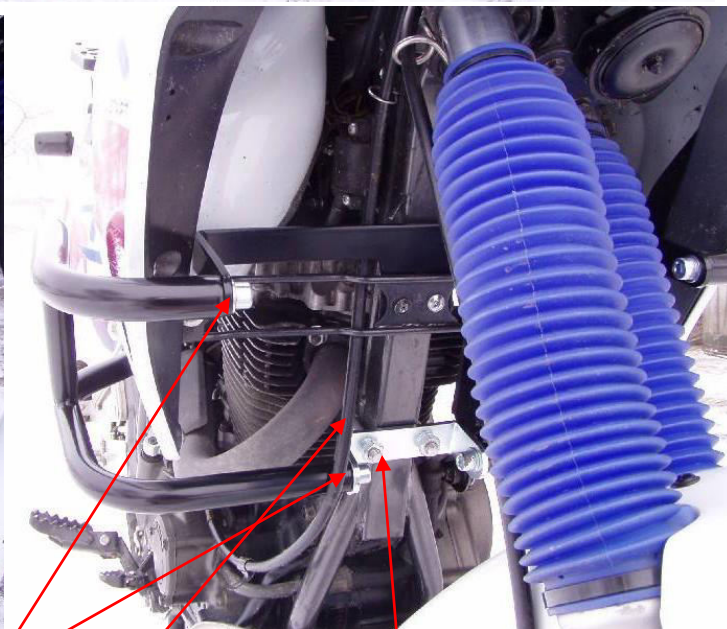

Use bolts ID.9 and washer ID.5 for both sides. With vlack steel digger adapter ID.7

Use clamp shape U with threads M10. ID.4

Tighten nuts and washers M10 ID.6 and ID.5
 Use smaller steel bracket ID.3
 Place plastic caps on the nuts.