



CF130

KTM 790 Adventure /R_2019-

Kit for Left Side			
ID	Description	Cat.No.	Pcs
1	Frame	CF129-L	1
2	Steel adapter	X132	1
3	Dural. sleeve, lenght =78mm	1325	1
4	Dural. sleeve, lenght =24mm	1329	1
5	Dural. sleeve, lenght =27mm	1330	1
6	Screw M8x50mm	1065	2
7	-----	-----	---
8	Screw M10x25mm	1066	1
9	Washer - Flat M8	802	4
10	Washer - Flat M10	804	1
11	Frame	CF134-L	1
12	Stirrup 22mm	680	1
13	Stirrup with threads 22mm	682	1
14	Screw M6x40mm	865	2
15	Dural. sleeve, lenght =10mm	124	1
16	Screw M8x120mm	845	1
17	Washer – Flat M6	947	2
18	Stirrup plastic insertion	1331	2
19	Strut (to put between the frames)	X134	1


Kit for Right Side			
ID	Description	Cat. No	Pcs
1	Frame	CF129-P	1
2	Steel adapter	X133	1
3	Dural. sleeve, lenght =60mm	1326	1
4	Dural. sleeve, lenght =24mm	1329	1
5	Dural. sleeve, lenght =27mm	1330	1
6	Screw M8x50mm	1065	2
7	-----	-----	---
8	Screw M8x25mm	831	2
9	Washer - Flat M8	802	6
10	Screw M8x25mm	833	1
11	Frame	CF134-P	1
12	Stirrup 22mm	680	1
13	Stirrup with threads 22mm	682	1
14	Screw M6x40mm	865	2
15	Dural. sleeve, lenght =10mm	124	1
16	Screw M8x100mm	1000	1
17	Washer – Flat M6	947	2
18	Stirrup plastic insertion	1331	2

We recommend using medium strenght thread glue.

Instructions:

- 1.) Take off the original plastic casing**
- 2.) Mount the steel adapters following instructions below**
- 3.) Put the original casing back**
- 4.) Mount the bottom crash frames following instructions below, do not tighten the screw on top**
- 5.) When you finish mounting bottom frame, you may proceed with upper part**

Bottom Left Part:

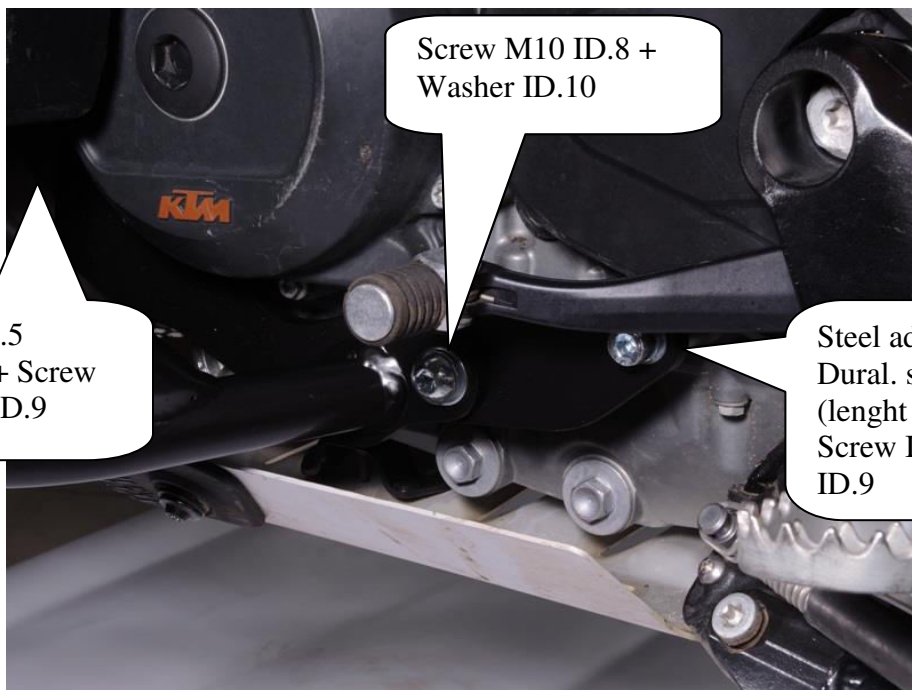


Screw M10 ID.8 +
Washer ID.10

Dural. roller ID.5
(length 27mm) + Screw
ID.6 + Washer ID.9

Steel adapter ID.2 +
Dural. sleeve ID.4
(length 24mm) +
Screw ID.6 + Washer
ID.9

Bottom Right Part:

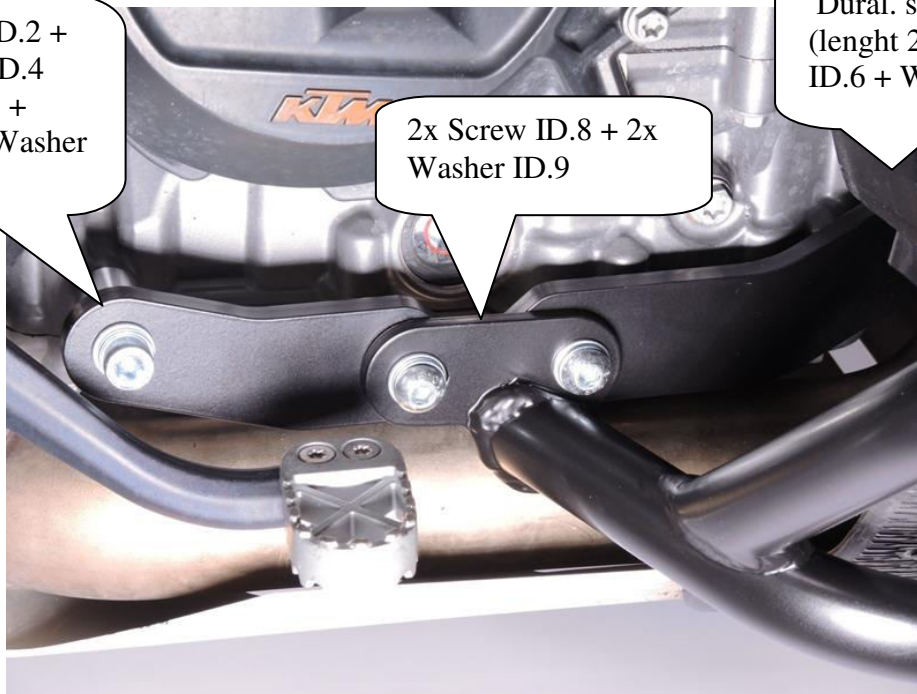

Steel adapter ID.2 +
Dural. sleeve ID.4
(length 24mm) +
Screw ID.6 + Washer
ID.9

2x Screw ID.8 + 2x
Washer ID.9

Dural. sleeve ID.5
(length 27mm) + Screw
ID.6 + Washer ID.9



Left Side : Screw ID.16 (length 120mm) + Washer ID.9 + dural. sleeve ID.15 (length 10mm) + dural. sleeve (put inside the frame) ID.3 (length 78mm)

Pravá strana : Screw ID.16 (length 100mm) + Washer ID.9 + dural. roller ID.15 (length 10mm) + dural. sleeve (to put inside the frame) ID.3 (length 60mm)



Steel strut ID.19 + Dural. stirrups ID.12 and ID.13 + 2x plastic insertions ID.18 + 2x Screws ID.14 + 2x Washers ID.17

Mounting procedure is identical for both sides.