

CF134

KTM 790 Adventure /R_2019-

Kit for Left Side			
ID	Description	Cat. No	Pcs
1	Frame	CF134-L	1
2	Stirrup 22mm	680	1
3	Stirrup with threads 22mm	682	1
4	Screw M6x40mm	865	2
5	Dural. sleeve, lenght=75mm	1340	1
6	Screw M8x120mm	845	1
7	Washer - Flat M8	802	1
8	Washer - Flat M6	947	2
9	Plastic stirrup insertion	1331	2
10	Strut (put between the frames)	X134	1

Kit for Right Side			
ID	Description	Cat. No.	Pcs
1	Frame	CF134-P	1
2	Stirrup 22mm	680	1
3	Stirrup with threads 22mm	682	1
4	Screw M6x40mm	865	2
5	Dural. sleeve, lenght =93mm	1339	1
6	Screw M8x100mm	1000	1
7	Washer - Flat M8	802	1
8	Washer - Flat M6	947	2
9	Plastic stirrup insertion	1331	2


We recommend using medium strenght thread glue.

Instructions:



Left side : Screw ID.6 (lenght 120mm)
+ Washer ID.7 + dural. sleeve ID.5
(lenght 75mm)

Right side : Screw ID.6 (lenght 100mm)
+ Washer ID.7 + dural. sleeve ID.5
(lenght 93mm)

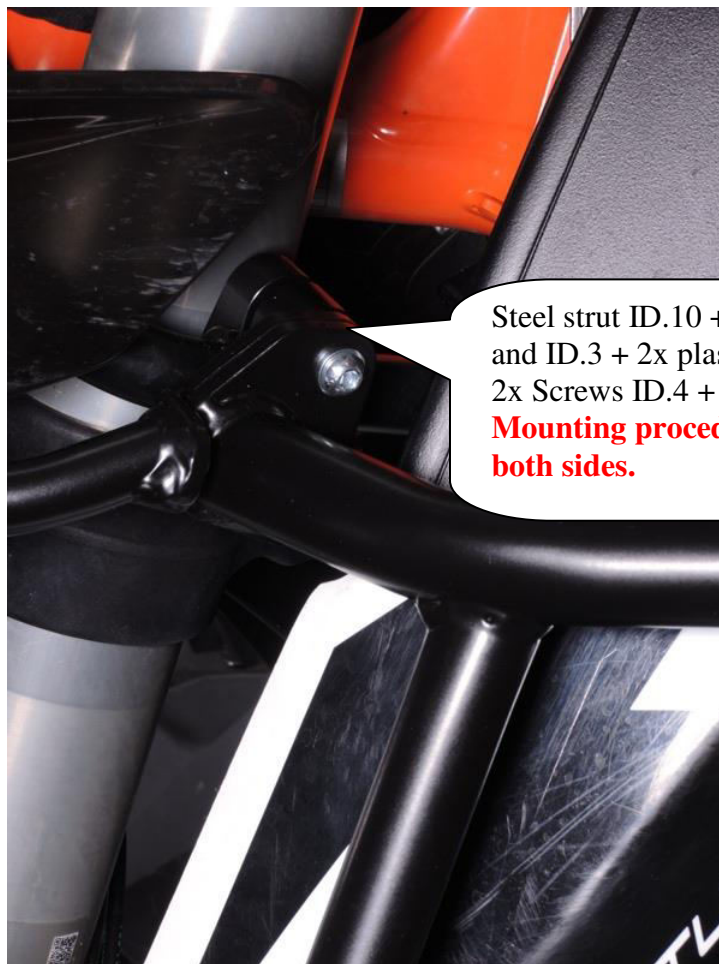

Steel strut ID.10 + dural. stirrups ID.2
and ID.3 + 2x plastic insertions ID.9 +
2x Screws ID.4 + 2x Washers ID.8

**Mounting procedure is identical for
both sides.**