


CF137-PH01

CFMOTO 650GT

Kit for the left side			
ID	Description	Cat.No	Pcs
1	Aluminum protector insert	X131	1
2	Bolt M10x70mm	851	1
3	Protector	PVPMN-0/16	1
4	Steel adapter	760	1
5	Bolt M8x40mm	828	1
6	Bolt M8x25mm	831	2
7	Flat washer M8	802	3
8	Dural.sleeve l=6mm	1346	1
9	Sticker RDMoto		1

Kit for the right side			
ID	Description	Cat.No	Pcs
1	Aluminum protector insert	X131	1
2	Bolt M10x70mm	851	1
3	Protector	PVPMN-0/16	1
4	Steel adapter	761	1
5	Bolt M8x35mm	861	2
6	Bolt M8x25mm	831	1
7	Flat washer M8	802	3
8	Dural.sleeve l=9mm	1347	1
9	Flat washer (large) M8	988	1
10	Sticker RDMoto		1

We recommend using medium strength thread glue during assembly.

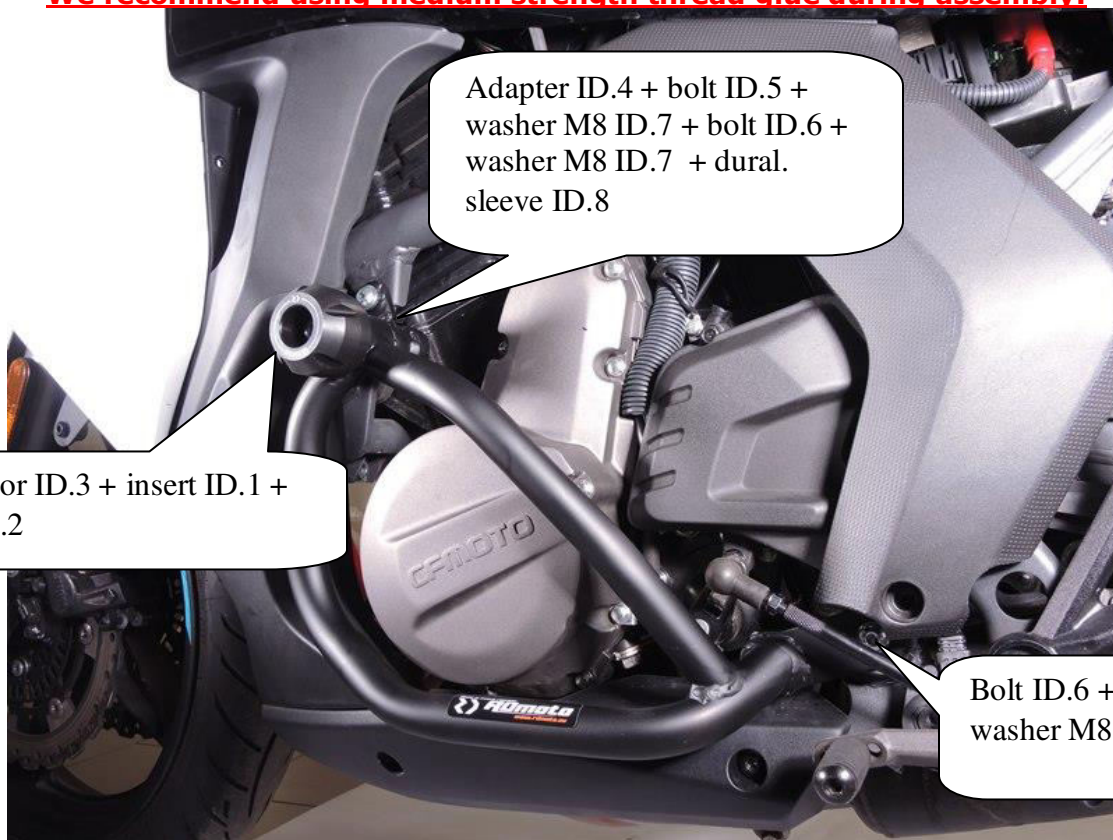


Adapter ID.4 + bolt ID.5 + washer M8 ID.7 + bolt ID.6 + washer M8 ID.7 + dural. sleeve ID.8

Protector ID.3 + insert ID.1 + bolt ID.2

Bolt ID.6 + washer M8 ID.7

Adapter ID.4 + 2x bolt ID.5 +
2x washer M8 ID.7 + dural.
sleeve ID.8

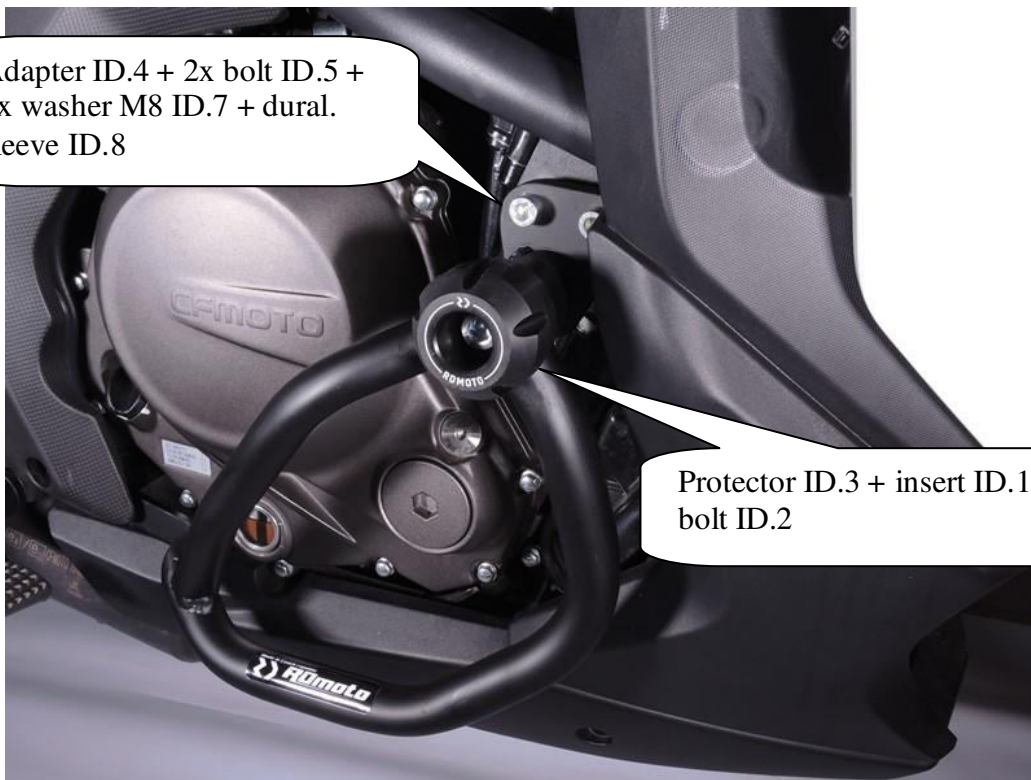

Protector ID.3 + insert ID.1 +
bolt ID.2



Bolt ID.6 + washer M8 ID.7 +
large washer ID.9 (use under the
crash frame)