

# CF156

## Honda X-ADV 750 2021-

Kit for the left side			
ID	Description	Cat.No	Pcs
1	Lower + upper frame	CF104+X-ADV2	1
2	Bolt M8x90mm	1054	1
3	Bolt M8x50mm	837	1
4	Dural. sleeve l=31mm	1264	1
5	Dural. sleeve l=19mm	1265	1
6	Bolt M8x40mm	828	1
7	Washer M8 - flat	800	2
8	Plastic cover	X5	3
9	Dural. sleeve l=37mm	1116	1
10	Washer M5 – flat	1057	1
11	Bolt M5x60mm	873	1
12	Sticker RDmoto		1


Kit for the right side			
ID	Description	Cat.No	Pcs
1	Lower + upper frame	CF104+X-ADV2	1
2	Bolt M8x90mm	1054	1
3	Bolt M8x50mm	837	1
4	Dural. sleeve l=31mm	1264	1
5	Dural. sleeve l=19mm	1265	1
6	Bolt M8x40mm	828	1
7	Washer M8 - flat	800	2
8	Plastic cover	X5	3
9	Dural. sleeve l=37mm	1116	1
10	Washer M5 – flat	1057	1
11	Bolt M5x60mm	873	1
12	Sticker RDmoto		1

**We recommend using medium strength thread glue during assembly.**

### **The assembly of the left and right side is identical.**

- 1.) Remove the original bolts from the motorcycle (first mount one side of the crash frames and then fit the other side of the crash frames).
- 2.) Take the lower crash frame and mount it at the bottom on the motorcycle (see picture with instructions), but do not tighten the screws.
- 3.) Now take the upper crash frame and connect it to the lower frame frame with an M8x90mm ID.2 screw, do not tighten the screw.
- 4.) In the upper part of the upper frame, use a duralumin roller with a length of 37 mm (ID.9) under the holder and mount it with an M5x60mm screw (ID.11) with an M5 washer (ID.10) on the motorcycle.
- 5.) Finally, tighten all screws and place the plastic caps on the screw heads.

**If you have any problems, please contact us by email.**

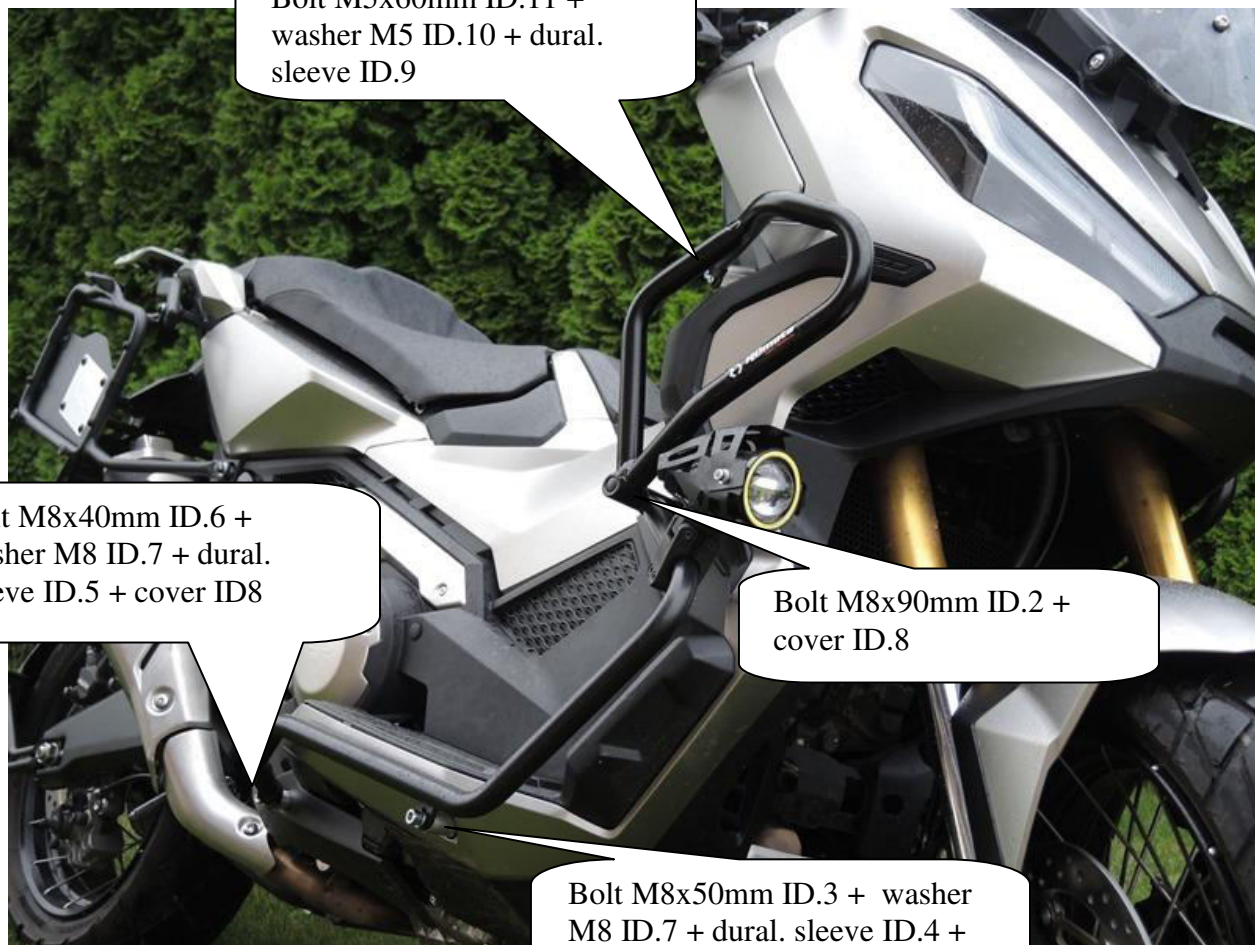

Bolt M5x60mm ID.11 +  
washer M5 ID.10 + dural.  
sleeve ID.9

Bolt M8x40mm ID.6 +  
washer M8 ID.7 + dural.  
sleeve ID.5 + cover ID8

Bolt M8x90mm ID.2 +  
cover ID.8

Bolt M8x50mm ID.3 + washer  
M8 ID.7 + dural. sleeve ID.4 +  
cover ID.8