



CF157

Moto Guzzi 1200 Stelvio 2008-2016

Kit for left side			
ID	Description	Cat.No	Pcs
1	Bolt M12x90mm	808	1
2	Dural. roller l=32mm	1118	1
3	Bolt M8x40mm	828	2
4	Dural. roller l=13mm	86	2
5	Washer M8 – flat	802	2
6	Washer M12 – flat	803	2
7	Dural. roller l=13mm	1100	1
8	Sticker RDMoto		1
9	Nut M12	811	1


Kit for right side			
ID	Description	Cat.No	Pcs
1	Bolt M12x90mm	808	1
2	Dural. roller l=32mm	1118	1
3	Bolt M8x40mm	828	2
4	Dural. roller l=13mm	86	2
5	Washer M8 – flat	802	2
6	Washer M12 - flat	803	2
7	Sticker RDMoto		1
8	Rod	12x270x30x30	1
9	Nut M12	811	1

We recommend using medium strength thread glue during assembly.

Instructions (for the right and left side are the same):

- 1.) Remove the original bolts from the motorcycle (first fit the right side of the crash frames and then fit the left side of the crash frames).
- 2.) Remove the plastic cover on the left side (at the rear, see photo) and the brake container on the right side
- 3.) Now proceed with the assembly according to the photo.
- 4.) The assembly of the left and right side is the same except for the rear mounting. Use a steel rod 12x270x30x30mm here and secure with M12 nuts with M12 washers, on the left side use a duralumin roller with a diameter of 25mm and a length of 13mm under the frame.
- 5.) Tighten all screws at the end.

Remove the plastic cover.
Use duralumin under the
crash frame for mounting.
roller length 13mm ID.7
and rod 12x270x30x30
ID.8 with nuts M12 ID.9
and washers M12 ID.6

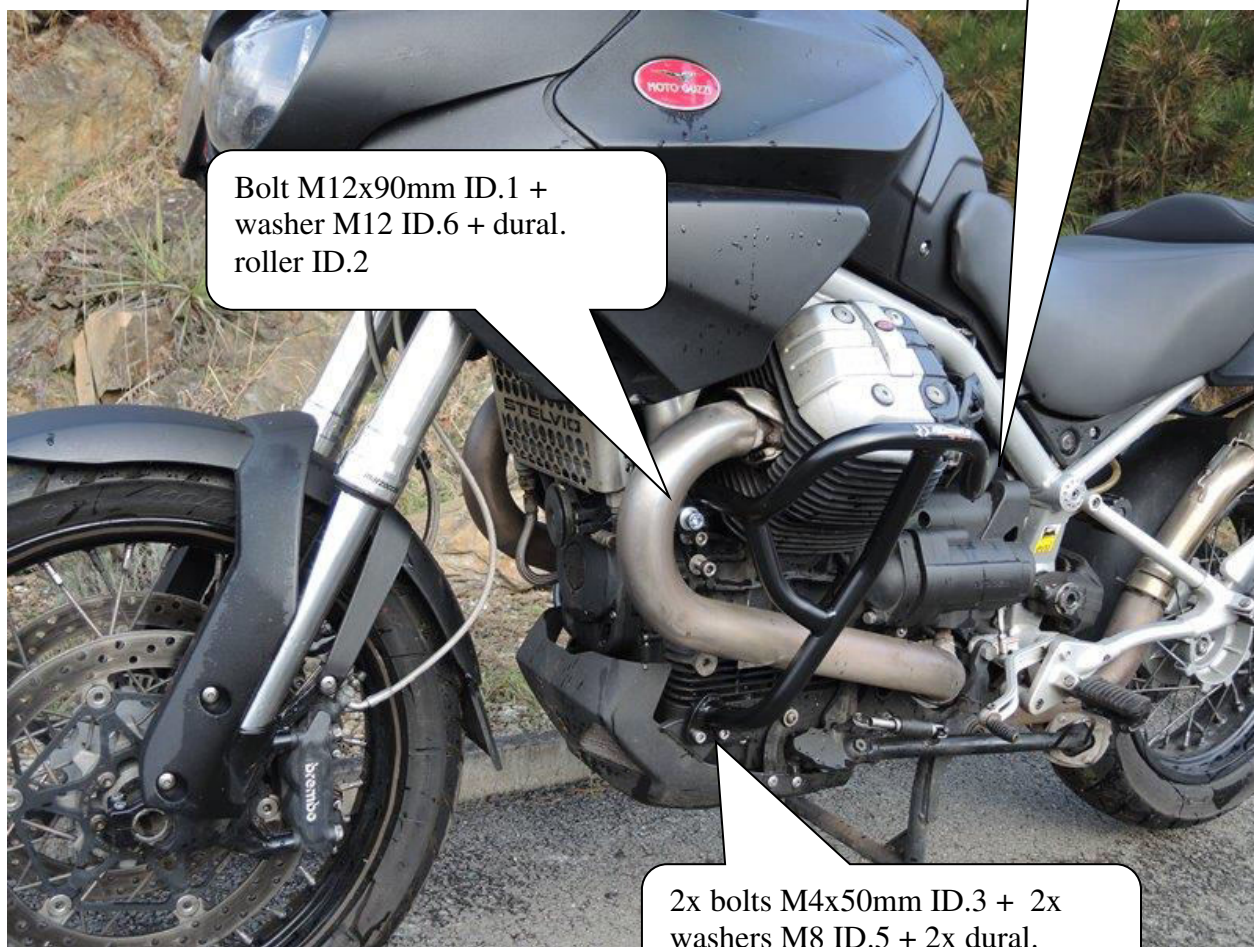

Bolt M12x90mm ID.1 +
washer M12 ID.6 + dural.
roller ID.2

2x bolts M4x50mm ID.3 + 2x
washers M8 ID.5 + 2x dural.
rollers ID.4