



CF43

BMW R1100GS/Adventure

Kit for left side:

Note	Description	Cat.num	Quant.
1	Crash bar		1
2	Steel strut between bars	X70	1
3	Silenblok	X21	1
4	Nut M8 – safety	809	1
5	Pad M8 – plane	802	1
6	Bolt M8x25mm	831	1
7	Pad M8-spring	800	1
8	Bolt M10x100mm	885	1
9	Pad M10-spring	801	2
10	Dural. cylinder d=55mm	439	1
11	Screw M10x70mm	851	1
12	Dural.cylinder 15mm	1170	1
13	Advertising sticker RDmoto		1

Kit for right side:

Note	Description	Cat.num.	Quant.
1	Crash frame		1
2	Silentblock	X21	1
3	Nut M8 – lock	809	1
4	Washer M8	802	3
5	Bolt M8x25mm	831	1
6	Washer M8	800	3
7	Bolt M10x100mm	885	1
8	Washer M10- spring	801	1
9	Duralumin cylinder d=55mm	439	1
10	Duralumin cylinder d= 18mm	1185	1
11	Bolt M8x50	837	1
12	sticker RDmoto		1

14	M8x20	823	2
15	washer M10	804	2


Mountin :

Perfomr the assembly by photo.

Warning - the threads of the screws is recommended to use glue. (medium strong-blue).

Right side:

bolt M10x100mm +
duralumin cylinder (note
9)d=55mm + washer M10
(flat and spring)

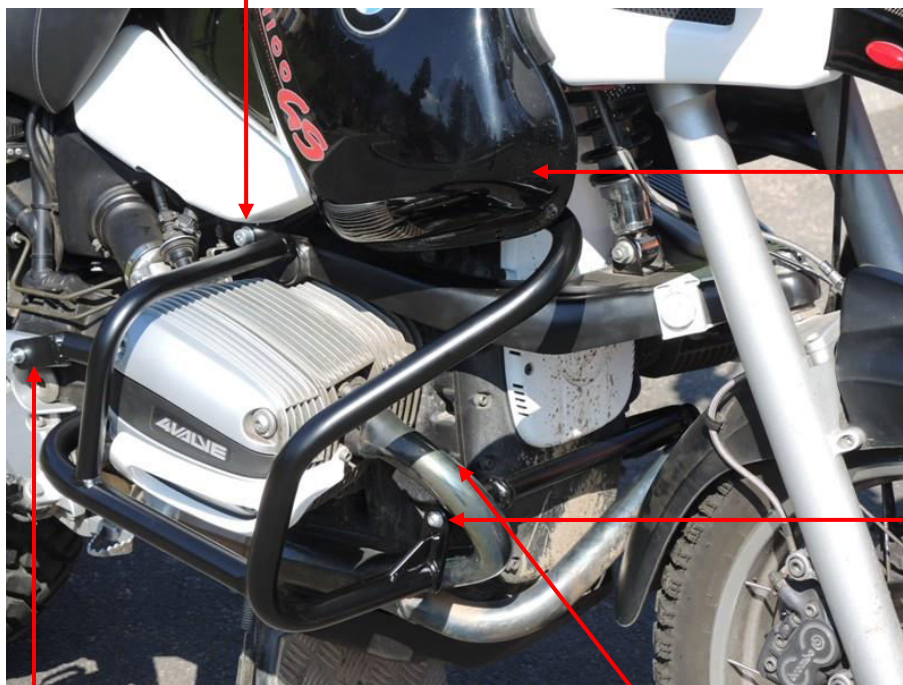

Original bolt
or M8x20
(note 14)+
washer

bolt
M8x25mm
+washer M8
(spring)

bolt M8x50 (note 11) +
washer flat + washer spring
M8
duralumin cylinder (pzn.10)


nut M8 (lock) + washer
M8 (flat) + silentblock

Left side:

Steel bar

Original bolt
or bolt
M8x20
(note 14)

bolt M10x100mm +
duralumin cylinder 55mm
+ washer M10 (spring +
flat)

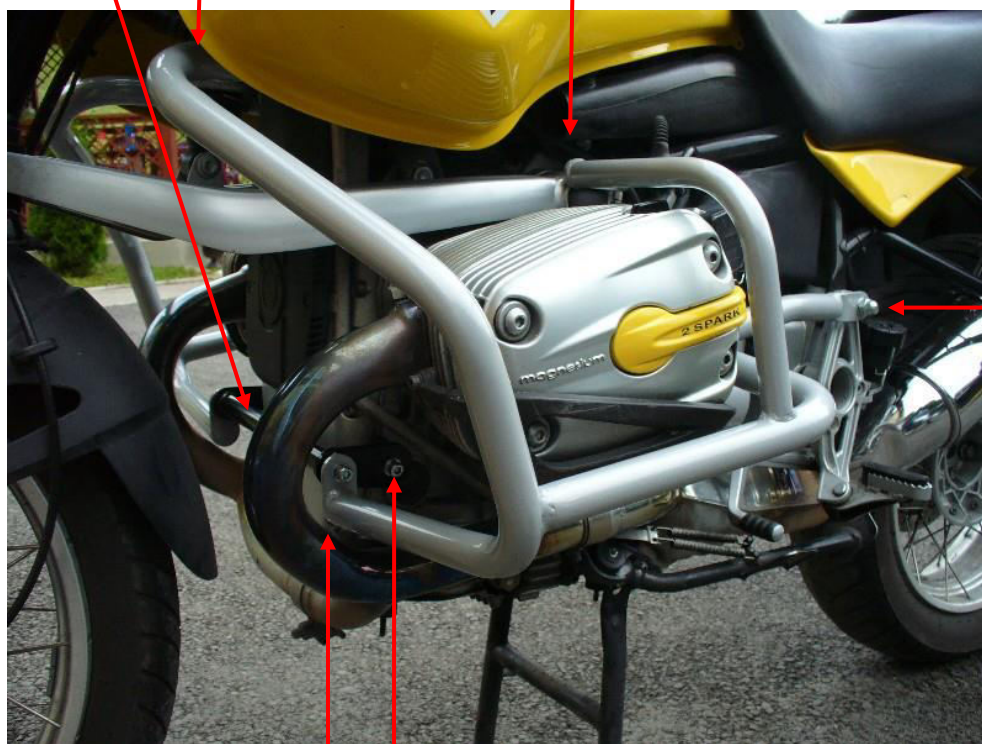

Screw
M10x70mm,
dural. cylinder
l=15mm and
spring washer

Bolt
M8x25mm
+ washer
M8 (spring)

nut M8 (lock) + washer
M8 (flat) + silentblock