

CF48KD


BMW F800R

Left side fitting kit:

ID.	Descrip.	Cat.N	Qt
1	Crash frame	-	1
2	Screw M10x90	880	2
3	Washer M10	804	2
4	Plastic cover	X4	2
5.1	Dural roller - 6,5mm	1105	2
6	Sticker	-	1
7	Washer M8	800	1
8	Screw M8x25	831	1

Right side fitting kit:

ID.	Descrip.	Cat.N	Qt
1	Crash frame	-	1
2	Screw M10x90	880	2
3	Washer M10	804	2
4	Plastic cover	X4	2
5.2	Dural roller - 7mm	405	2
6	Sticker	-	1

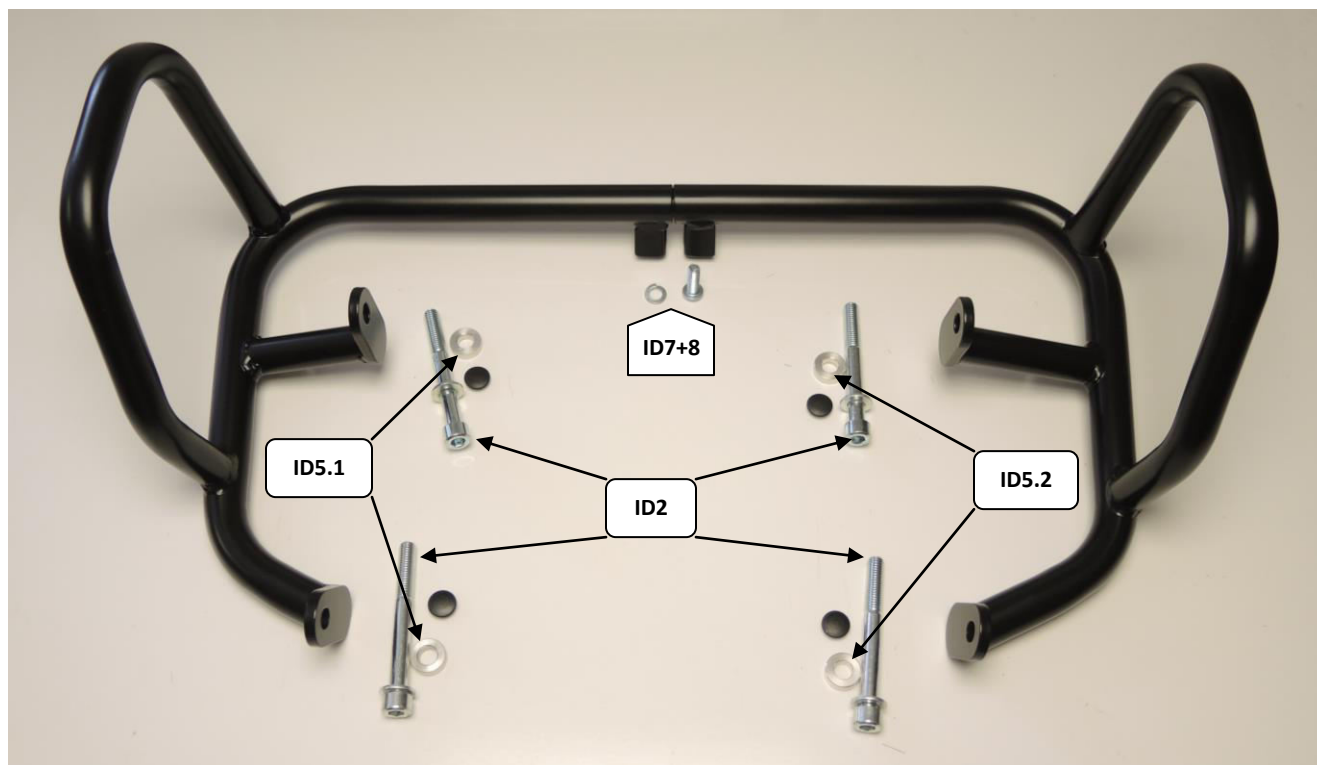

Instalation (do not tighten screws completely during installation)

1. Remove original screws from motorcycle (according to the picture below).
2. Put frames (ID1) on motorcycle and connect them with screws M10 (ID2) and washer (ID3).
3. Insert dural rollers (ID5.1 – left + ID5.2 - right) between frames and motorcycle.



4. Connect frames using screw M8 (ID8) and washer (ID7)
5. In the end tighten all screws, cover them with plastic covers (ID4) and place stickers (ID6).

