

# CF51

## Kawasaki VN 650 Vulcan '15-

### Kit for left side:

ID.	Description	Cat.	Qt
1	Crash bar	-	1
2	Bolt M8x30	834	1
3	Bolt M6x30	864	1
4	Alu. spacer d=10mm	1164	1
5	Washer M6	987	1
6	Washer M8	802	3
7	Washer spring M8	800	1
8	Bolt M8x25	831	1
9	Silentblock	X34	1
10	Nut full head	951	1
11	Connection bar	X69	1
12	RDMOTO Sticker		1

### Kit for right side:

ID.	Description	Cat.	Qt
1	Crash bar	-	1
2	Bolt M8x30	834	1
3	Bolt M6x30	864	1
4	Alu. spacer d=10mm	1164	1
5	Washer M6	987	1
6	Washer M8	802	3
7	Washer spring M8	800	1
8	Bolt M8x25	831	1
9	Silentblock	X34	1
10	Nut full head	951	1
-	-----	-	-
12	RDMOTO Sticker		1

### Instruction to assembly:

**Attention – we recommend to use safety glue for bolts. Medium strong.**




Place silentblock between the crash bar and frame. Tighten it by washer ID.6 and nut ID.10

Washer M6 with bolt M6x30. Under the crash bar place alu. spacer ID.4.

Bolt ID.8 with washer ID.6 and washer ID.7 for connecting bar.

**Assembly for right side is same !!**

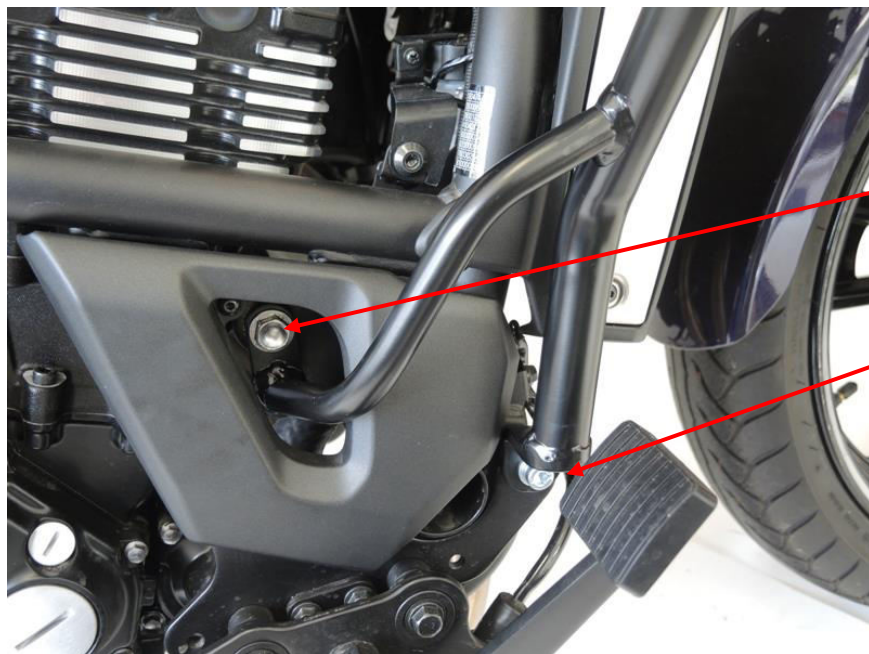

Use original bolt for mounting.

Place bolt ID.2 with washer ID.6 and tighten it.

**Assembl for left side is same !!**

