

CF99

Honda XRV 750 Africa Twin (1993-2003)

Kit for left side

ID.	Description	Cat. No.	Pcs
1	Crash Frame	-	1
2	Safety nut M10	810	1
3	Washer M10 – flat	804	2
4	Plastic cover M10	X35	1
5	Rod 270x10x30x30		1
6	Upper strut	X110	1
7	Washer M6	947	1
8	Safety nut M6	948	1
9	Bolt M10x30	882	2
10	Lower Strut	X111	1
11	Bolt M8x65	982	1
12	Washer M8 flat	802	1
13	Washer M8 Spring	800	1
14	Plastic cap M8	X5	1
15	Plastic cap M10	X4	1
16	Bolt M8x30	834	1

Kit for right side


ID.	Description	Cat.No.	Pcs
1	Crash Frame	-	1
2	Safety nut M10	810	1
3	Washer M10 – flat	804	2
4	Plastic cover M10	X35	1
5	RDmoto Sticker		2
6	Stirrup M6	X112	2
7	Washer M6	947	1
8	Safety nut M6	948	1
9	Bolt M10x30	882	2
10	Blowout	X104	1
11	Bolt M8x65	982	1
12	Washer M8 flat	802	1
13	Washer M8 spring	800	1
14	Plastic cap M8	X5	1
15	Plastic cap M10	X4	1

Mounting instructions:

Proceed with mounting the crash frames following the procedure shown on attached pictures. On right hand side, take off the exhaust cover before mounting our crash frames.


Note – We recommend using medium strenght thread glue for all bolts (blue color).



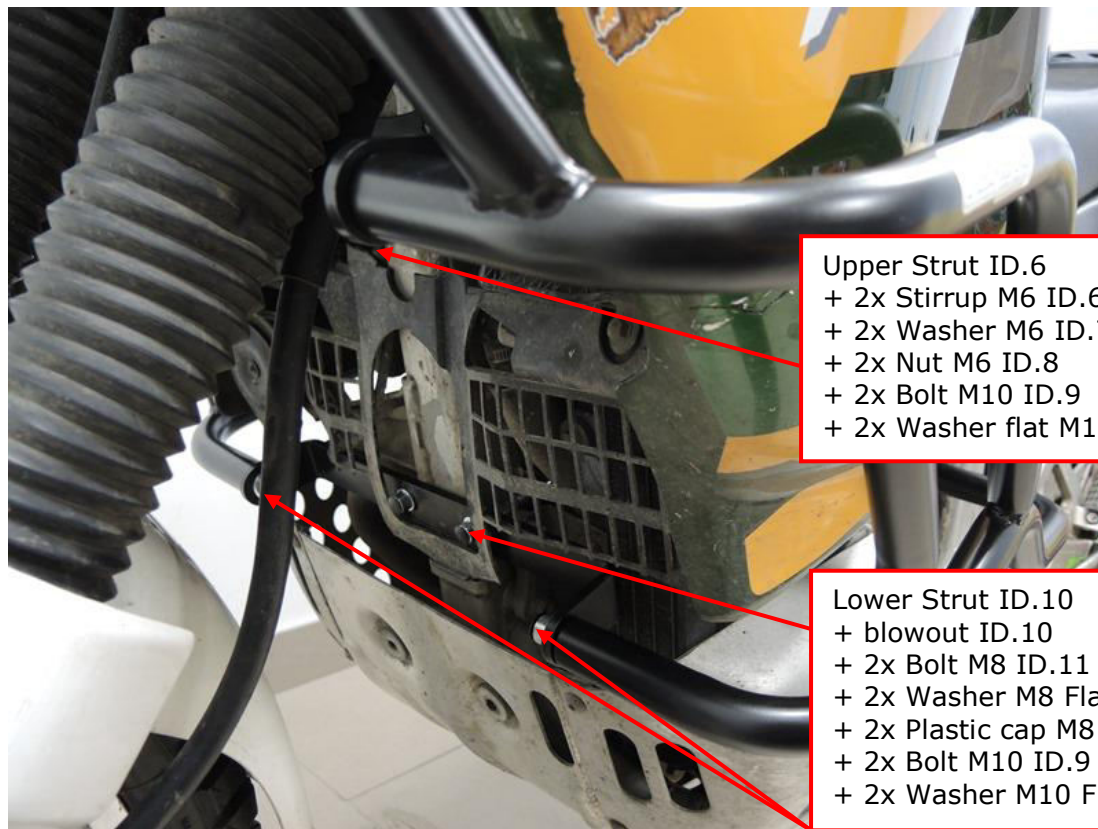

Upper Strut ID.6
+ 2x Stirrup M6 ID.6
+ 2x Washer M6 ID.7
+ 2x Nut M6 ID.8
+ 2x Bolt M10 ID.9
+ 2x Washer flat M10 ID.3

Lower Strut ID.10
+ blowout ID.10
+ 2x Bolt M8 ID.11
+ 2x Washer M8 Flat ID.12
+ 2x Plastic cap M8 ID.14
+ 2x Bolt M10 ID.9
+ 2x Washer M10 Flat ID.3

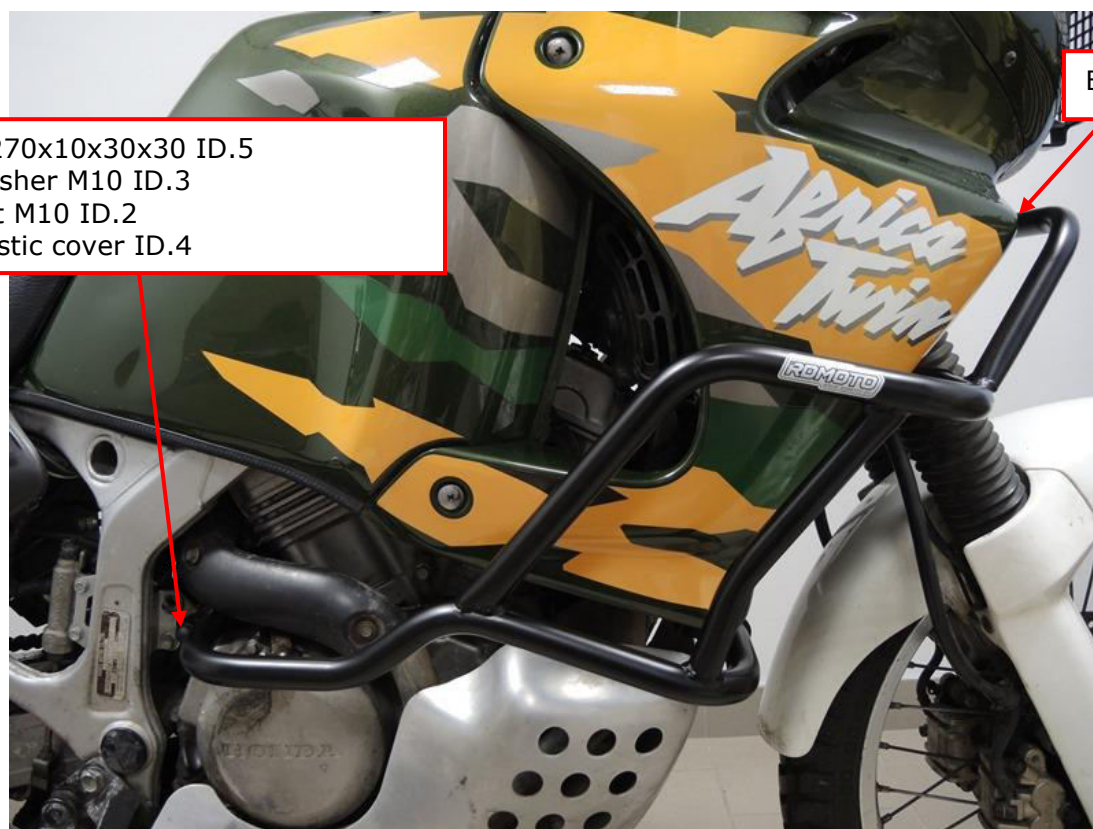

Rod 270x10x30x30 ID.5
+ Washer M10 ID.3
+ Nut M10 ID.2
+ Plastic cover ID.4

Bolt M8x30 ID.16